Visture Ltd all rights reserve

User Manual

VISTURE V4

Visture Ltd all rights reserve

Table of Contents

Safety instructions---------- 3
Device overview ----------4
Description of the buttons ----------5
Language settings----------6
Power monitoring and charging the batteries----------7
Screen lock----------7
Connecting with computer and data transfer----------7
Functions of the buttons on theUser interface----------8
Programme menu----------10
System settings----------13
1. Wireless & Networks----------13
2. Bluetooth setting----------13
3. Sound settings----------14
4. Display settings----------14
5. Location & safety----------15
6. Application----------15
7. Accounts & sync-- ----------15
7. Data protection----------15
9. Memory----------16
10. Language & keyboard ----------16
11. Date & time----------16
12. Telephone info----------16
Internet ----------17
Open Source Code & GNU General Public License----------18
Technical Data----------19
Trouble shooting----------20

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display – use only a dry cloth.

Visture Ltd all rights reserve

Device overview

1. Menu button
2. Volume up Button
3. Volume down Button
4. Home button
5. Micro SD/SDHC Card Slot
6. Mic
7. HDMI Port
8. USB Port
9. OTG Port: USB from your external HDD
10. DC-in
11. Speakers
12. Earphone
13. Power button

Description of the buttons

Volume Buttons:
Increase or reduce the volume.

Power Button:
Press the button for 2~3 seconds to switch on or switch off the device. Short Press the button to enter or end the Standby-Mode.
Reset: Press the button for 7~10 seconds to restart the device.

ESC Button:
To go back to the previous screen

Menu Button:
To open the menu

Home Button:
To go back to the Home Screen

Visture Ltd all rights reserve

Language setting

V4 is delivered with English as a default language.
To change the language setting, please do the following:

- Press on the programme menu symbol  on the right side of the screen.
- Select ‘Settings’ 

.
- Scroll to the end of the list.
- Select ‘Language & keyboard’.
- Select ‘Select language’.
- Type your preferred language.
- Press the ‘Home’ button to return to the home screen.

Power monitoring and charging the batteries

The battery charge symbol on the status bar indicates the charging status of the batteries.
If the power goes down to empty, the device shuts off automatically.
If power is empty, use the power adapter to charge the device.
The charging time for the battery is approximately 6~8 hours.

Screen lock

If the device is not used for specified time or press the ‘Power’ button briefly, the screen will switch off and display lock is activated. By pressing the ‘Power’ button briefly the screen will be reactivated. For unlocking the screen press the ‘Lock’ button in the specified direction.

Connecting to the computer and data transfer

V4 is equipped with a High-Speed USB2.0 Interface.
After you connect the device to a computer, it appears in the status bar display .
Pull the status bar down and press ‘USB Connection’ to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from V4!

Functions of the buttons on the user interface:

Home Button:
To go back to the Home screen.

Menu Button:
To open the menu.

Back Button:
To go back to the previous menu / previous page.

 Program Menu Button:
To display the programs and applications.

Change Window Button:
The device has five desktops. You can press this button
or push your finger on the touch screen to the side to navigate
between different desktops.

WIFI / WLAN Signal Icon

System instructions:
Pull the status bar down to view messages about new e-mails,
downloaded documents, USB Connection Status or other information.

Program menu

ApkInstaller:
Program for installing and uninstalling Apps that were not downloaded from the Android Market.

Market (Google Play Store):
Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.

Explorer:
Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.

Internet browser

Camera

E-mail:
App for exchange email account set up, and compose/send/receive email

G-mail:
App from Google, receiving, processing and sending e-mails through Google account.

Google Maps:
Program for the display of maps or satellite images – Route planner.

Skype:
Program to chat with other Skype users or to make video/audio calls via Internet.

Twitter:
Application for Microblogging – Facilitates the display of public diaries or create a public diary of your own.

Facebook:
Program for using the social network site Facebook.

Calendar:
Managing schedules – can be synchronised automatically with a Google account.

Pocket Calculator

Time:
Time display and setting alarm functions.

Settings:
Changing the basic settings of V4.

Sound Recorder:
Dictation Device Function.

Video Player

Gallery:
Manage and display images and videos – also enables synchronisation with Picasa web albums.

Shelves:
A program for reading and managing e-books.

System settings

Touch the icon for the settings

to open the system settings menu:

1. Wireless & Networks

Touch ‘Wireless & Networks’.

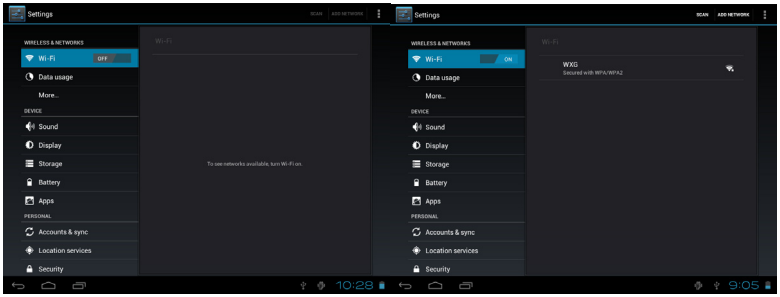

WLAN: Touch 

=> 

to switch on the WLAN function.
The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.
If needed you will be requested to enter your WLAN password:

Visture Ltd all rights reserve

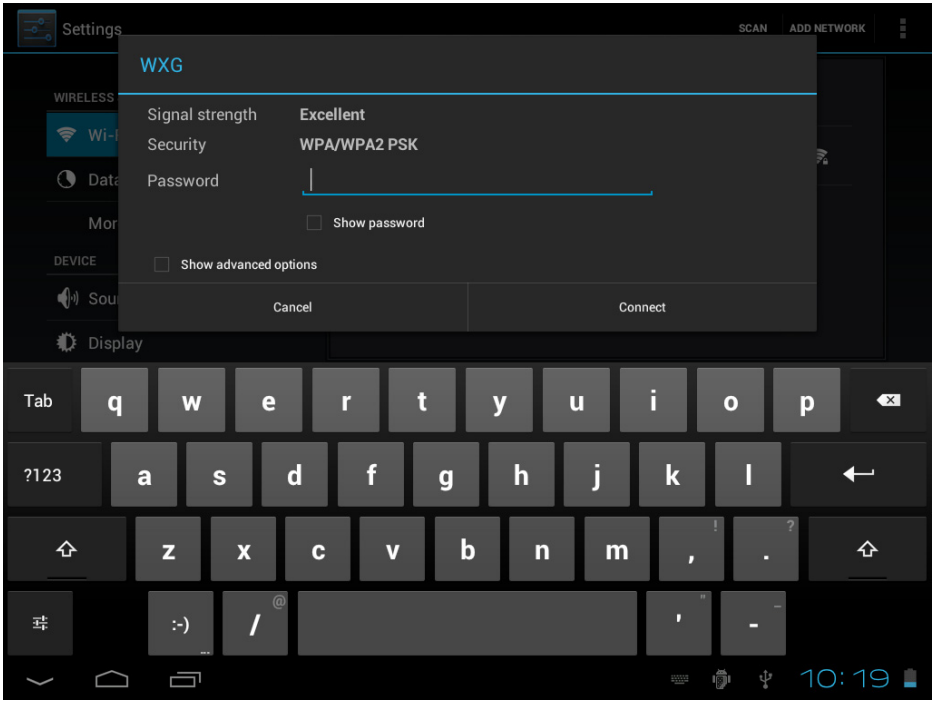

Advanced WLAN / Wi-Fi settings:

Touch in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

2. Bluetooth setting

Touch ‘Bluetooth’.

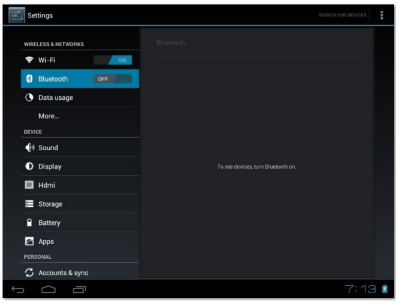

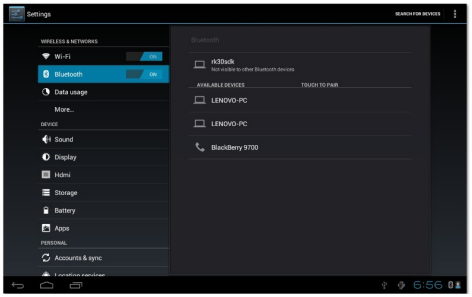

Bluetooth: Touch 

=> 

to switch on the Bluetooth function.
The device automatically searches for available Bluetooth device.

Bluetooth match Settings: Select your Bluetooth device.
Device might request to enter a pair password that show on a screen window

3. Sound settings

The ‘Sound’ settings contain the volume control, and selection of notification sounds, system sounds, and signal tones for Micro SD/TF Cards and USB signal tone.

4. Display settings

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after: 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen

lock is activated. Press the ‘Power’ button to reactivate the Display. Push the ‘Lock’ button up to lift the screen lock.

5. Location & safety

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your V4.

6. Application

Here you can manage your apps and define if apps from sources other than the Android Market are allowed to be installed.

7. Accounts & sync.

General synchronisation settings:

1. Background data
2. Automatic synchronisation

Account management: Management of user accounts

8. Data protection

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch ‘Reset to default’ to reset the device to factory settings. All settings, self-installed apps and data stored on internal memory can be deleted.

9. Memory

Memory capacity report.
Touch ‘Remove SD Card’ to remove the Micro SD/TF Card

during use.

10. Language and keyboard
Set the system language and input method.

11. Date and time
If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

12. Telephone info
Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

Main functions

Internet

Touch

Icon to surf the net.
Google is the default start page.
Touch the input field to display the keyboard:

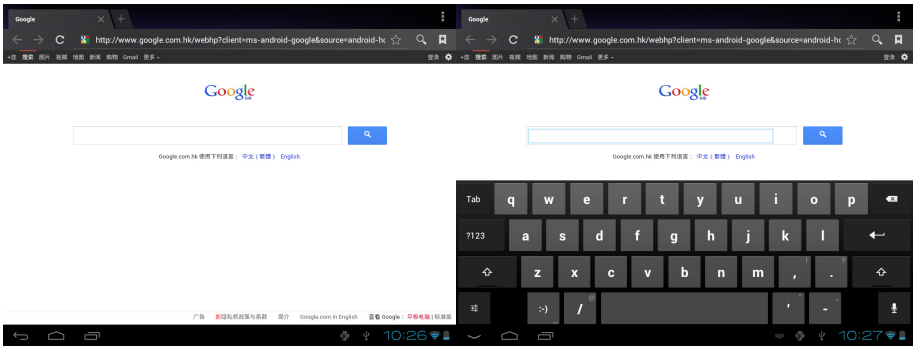

Touch after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;

Touch and the menu will be displayed as follows:

Visture Ltd all rights reserve

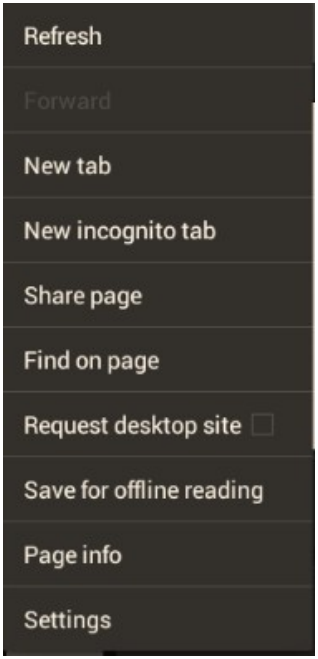

Touch ‘Refresh’ to refresh the current web page
Touch ‘New tab’ and a new website will be displayed.
Touch ‘New incognito tab’ and a new blank website will be displayed
Touch ‘Share page’ to Share this page to others
Touch ‘Find on page’ to enter new web address
Touch ‘Request desktop site’ to make it default web
Touch ‘Save for offline reading’ to read it when offline
Touch ‘Page info’ to check the web information
Touch ‘Settings’ to enter in browser settings

Visture Ltd all rights reserve

Technical Data

V4	9.7" / 24.7cm Tablet-PC
CPU	Rockchip rk3066 dual-core 1.5 GHz
Operating System	Android 4.0 – Ice Cream Sandwich
RAM	1GB DDR3
Internal Memory	16GB NAND Flash
Memory Expansion	Micro SD/SDHC up to 32GB
Display	4:3 Capacitive 10-point Multi-Touch-Display
Resolution	1024 x 768 Pixel
G-SENSOR	MMA8452Q
Camera	Front 2.0MP,Back 2.0MP
Battery	8000MAH, 5V, 2A rechargeable Li-ion Battery
MIC	Yes
	Internet & Skype Phone-Function
WIFI	802.11b/g/n (high sensitivity)
Bluetooth	Build in
I/O ports	1x DC In, 1x headphone, 1x TF Card-Slot,
	2x USB 2.0, 1 host, 1 OTG,1 HDMI
Video-Formats	H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P,
	YouTube, 720P, HTML5, Flash 11
Office	Word / Excel / PDF / PPT, Microsoft Word pad,
	Microsoft Spread Excel
	The software is not on the device user can find in the
	internet or Google play store
Images	JPG, BMP, PNG etc.

Trouble shooting

In seldom conditions, the device might not work properly due to the misusage or firmware; VISTURE has below solution as reference and will also release new firmware regularly to improve user experience:

Touch panel can not work accurately
Solution: When the battery gets low to 10% or less, the touch panel might not work accurately, the device needs recharge.

Can not wake the V4 up from the sleep mode
Solution: Long press the power button to power off the device forcibly and then restart

3G USB dongle can not work
Solution: Go to the setting to check whether the 3G mode power switch is on, if no, activate it. Check the 3G modem config and make sure the SIM is compatible with the 3G modem.

Device switches off accidentally or can not power on
Solution: Battery might be empty or getting close to empty, recharge the device for 5~8 hours then power on.

Operation become slow and can not run the app efficiently
Solution: There might be too many apps run in the background which occupy too much RAM. Click on the "Task manager" app and stop the unnecessary apps.

Tablet can not boot completely and stay in the "Android" icon
Solution: Power off the device and reload the FW into the device. About how to reload the FW please refer to the Web site Support.

Thanks for your purchasing of the Visture device, if there are issues need support, you can Email: aftersales@visture.com